


Anziehvorschrift für Zylinderkopf		246.558	 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Volkswagen	
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	

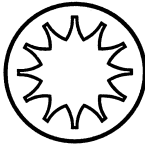

819.824
M 12 x 115

10	4	2	6	8
7	5	1	3	9

Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	40 Nm 60 Nm 90° 90°
---	-----------------	------------------------------

Zeichenerklärung / Explanations / Explication / Explicacion

✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

89 mm Ø

Audi 100, Avant, 06/1976>07/1978
2,0 Ltr., 77/85 kW (105/115 PS) Mot.WA,WF
bis Chassis >438 2300 000
LT 28, 31, 35, 1975>09/1983

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*246.558*
--	------------------