

Installation instruction for idler pulleys

Technical Info No. 1796

Vehicle manufacturers:

Audi, Skoda, VW

Models:

Audi A4 / A6 / Allroad / A8 / Skoda Superb
VW Passat / Phaeton

Engines:

2.5 TDI and 4.2 V8

Items affected:

No.	RUVILLE no.	OE no.
1	55459 (old)	059 109 244 (old)
2	55707 (new)	059 109 244 B (new)

Important note:

The idler pulley 55459 (Fig. 1) has been replaced by 55707 (Fig. 2).
Using the wrong screw may result in damage to the engine!

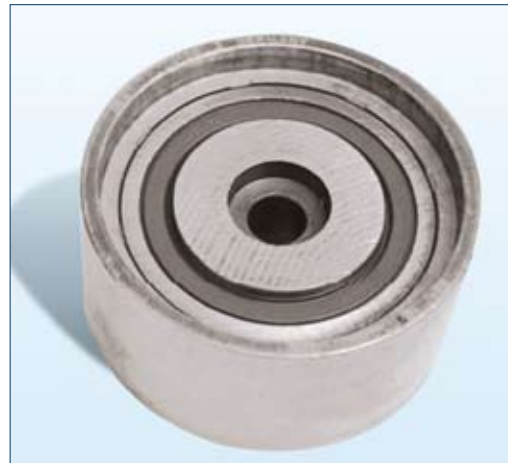


Fig. 1: 55459 (old version)

The idler pulley 55459 must be installed with a hexagon socket screw with a thread length of 40 mm.



Fig. 2: 55707 (new version)

The idler pulley 55707 must be installed with a hexagon socket screw with a thread length of 30 mm.